


## IQ4 HOOK-UP WITHOUT DUAL VOLTAGE JACK

Remove one plug end of the IQ cable. Internal wire includes a Red, Black, Green and Yellow wire. Attach the Red wire to the positive output lug, (Battery) cable. Attach the Black wire to the left terminal and the Green wire to the right terminal of the dual voltage terminal block. Cap the unused Yellow wire.

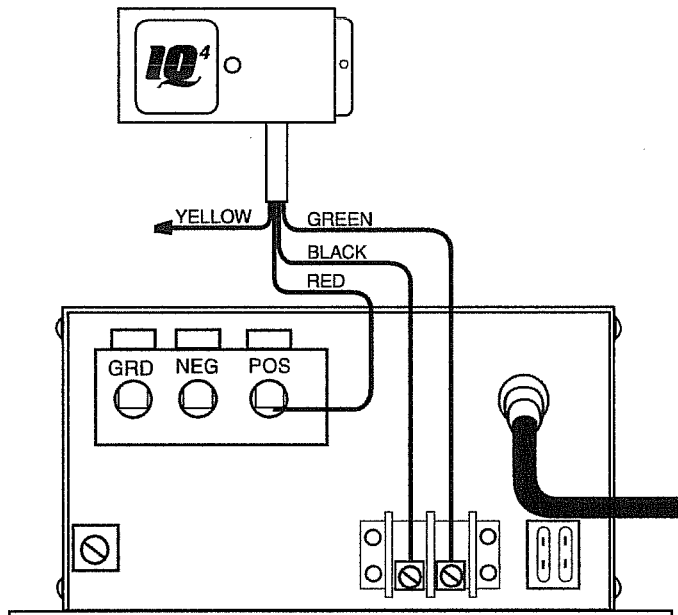

## IQ3 HOOK-UP WITHOUT DUAL VOLTAGE JACK

Lead wire includes a Red, Black, and White wire. Attach the Red wire to the positive output lug, (Battery) cable. Attach the Black wire to the left terminal and the White wire to the right terminal of the dual voltage terminal block.

